

# Wireless Connectivity Test Set MT8862A





Have you measured me up?





## MT8862A

#### Ideal for RF TRx Tests of WLAN Devices

Wireless communications over WLAN are increasing rapidly due to the widespread use of mobile terminals, such as smartphones, as well as integration of network-connected TVs, cleaners, automobiles, industrial equipment, sensors, and more, into the Internet of things (IoT). Makers of these equipment are anticipating more end-user enquiries related to WLAN performance, including network coverage, reception sensitivity, etc.

Anritsu's Wireless Connectivity Test Set is ideal for measuring the RF TRx characteristics at design and manufacturing inspection of WLAN devices. It has a built-in Network Mode for measuring the performance of the WLAN DUT under realistic operation conditions to play a key role in quality evaluation and improvement.

11ax

6 GHz Band

#### **Supports Latest Technologies**

MT8862A supports IEEE802.11a/b/g/n/ac and the latest WLAN standard, IEEE802.11ax, as well as the 6 GHz band, which is becoming an unlicensed band worldwide. RF TRx characteristics such as transmit power, modulation accuracy, and receive sensitivity can be evaluated for a variety of diversified WLAN-equipped devices.

Network Mode

**Direct Mode** 

#### Measurement under Realistic Operation Conditions

The MT8862A uses standard WLAN protocol messaging with a built-in Network Mode to establish a connection with the WLAN device and measure the RF TRx characteristics under realistic operation conditions. Also the MT8862A supports Direct Mode.



Smartphone Tablet



Gateway



Smart appliances



Wearable device





Automotive

Medical device



Smart grid



3

#### Wireless Connectivity Test Set MT8862A

#### **RF TRx Measurements of WLAN Equipment**

The Wireless Connectivity Test Set MT8862A is designed for measuring the RF TRx characteristics of WLAN equipment. It has standard WLAN protocol messaging (WLAN signalling) to connect with the device under test (DUT) for measuring the TRx performance items as Network Mode. It is the biggest feature of MT8862A. MT8862A gives manifold inspections for WLAN equipment because it also supports Direct Mode.

#### Supported Communications Standards • Security encryption

WLAN IEEE802.11a/b/g/n/ac/ax (2.4 GHz, 5 GHz and 6 GHz bands) [AP/STA] WEP, WPA-Personal, WPA2-Personal and WPA3-Personal




Wireless Connectivity Test Set MT8862A

#### RF Performance Measurement under Actual Operation Conditions (Network Mode)

By using the MT8862A Network Mode, RF TRx characteristics, such as Tx power, modulation accuracy (EVM), etc., can be measured with the WLAN device in actual operation conditions. It is not necessary to put the DUT into dedicated test mode and directly control the DUT. The DUT RF performance can be quantified under the firmware conditions at actual shipment.


#### **Easy Measurement Environment Configuration**

The MT8862A can simulate access points (AP) and station (STA) to establish the DUT network connection using IEEE802.11a/b/g/n/ac/ax WLAN protocol messaging. Each WEP, WPA-Personal, WPA2-Personal and WPA3-Personal secure connection method is supported, and TKIP and AES encryption schemes can be selected by combination with each standard. When the connection is established, RF measurements can be made using general WLAN communications procedures without requiring special tools and control procedures, eliminating the need for configuring a special measurement environment.

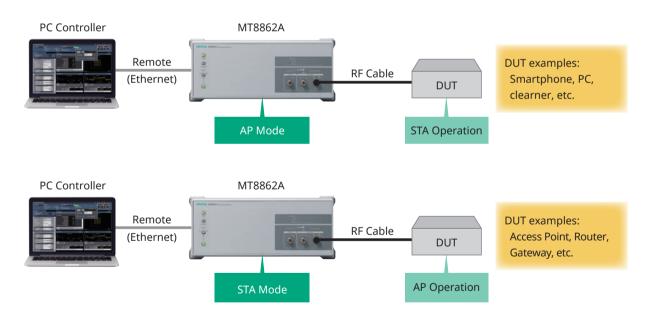


#### **ICMP Echo Request for Tx Measurement**

With the ICMP echo request, the MT8862A can measure RF Tx characteristics of reply packets from the DUT. The measurement targets are both data frames and ACK frames.

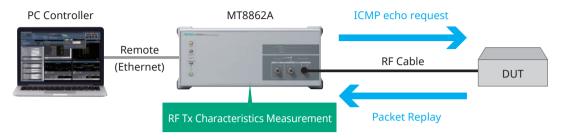

#### Rx Sensitivity Measurements using ACK Frame Count for Bathtub Curve Generation

The MT8862A supports Rx sensitivity measurements using the ACK frame count; counting the ACK frames sent by the DUT versus the test packets sent from the MT8862A supports calculation of the packet error rate (PER). Packets can be sent while lowering the power level by setting the power level range (0 to –120 dBm) and step size, and the Rx sensitivity Bathtub curve can be generated automatically. Packets including MAC address and payload length can be configured in real-time for measurement at various data rates.

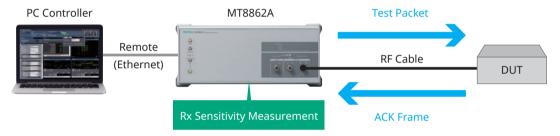

#### Web Browser GUI Operation Immediately after Connection

Connect the MT8862A to the external PC using an Ethernet cable for instant access from the Web browser to complete setup of the GUI operation environment without requiring test setup operation.

The Web-browser based GUI eliminates usage worries about version matching with the main frame firmware. Additionally, the MT8862A remote control port supports the DHCP client function and both host and domain name settings offer easy control simply by connecting the PC controller and MT8862A to the same network.



#### WLAN Measurement Software MX886200A Features

#### **Function Test**

#### Frame Capture Logging for Troubleshooting Connection Problems

With built-in frame capture logging function, the MT8862A can capture and save frame logs for troubleshooting DUT connection problems. Captured logs are in the \*.pcap format for viewing by supported applications, making it easier to analyze DUT connection problems.



#### **IP Data Transfer using Connection Verification Test**

The Ethernet port on the back panel of the MT8862A can be used for exchanging IP data with an external server; IP connections between the client PC connected to the DUT and the external server connected to the MT8862A can be checked using the ping function, etc.


\* This function does not support MIMO, does not support 802.11ax.



#### Receiver Sensitivity and Transmit Power Measurement Function for 2×2 MIMO

Receiver sensitivity and transmit power measurement under 2×2 MIMO communication can be tested by using 2 sets of MT8862A. This is suitable for RF performance evaluation for completed products.

\* This function supports IEEE802.11n/ac only.

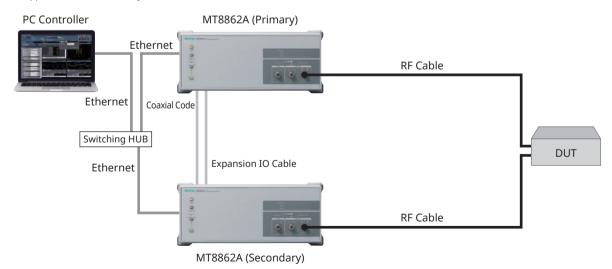


#### **WLAN Measurement Software MX886200A Features**


#### **Application Test**

#### **Network Mode for Over The Air (OTA) Test**

The TRx performance of wireless terminals is affected by factors such as the terminal form and antenna characteristics. The OTA test measures the general TRx performance of the wireless terminal using actual radio waves. The WLAN OTA test measures RF performance specifications in accordance with the recommendations of CTIA\* and the Converged Wireless Group (CWG) of the Wi-Fi Alliance, including Total Radiated Power (TRP), Total Isotropic Sensitivity (TIS), System integrators have test solution using MT8862A.


\*: Cellular Telecommunications & Internet Association; international non-profit organization composed of wireless-communications-related businesses, manufacturers, service providers, etc.

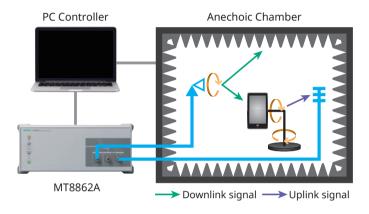

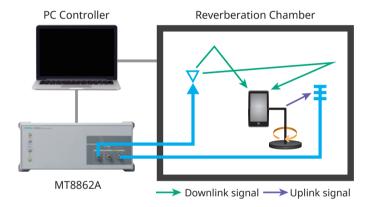

#### **Auto-ID information display**

MT8862A displays header information of packets used for transmit measurement as Auto-ID Information.

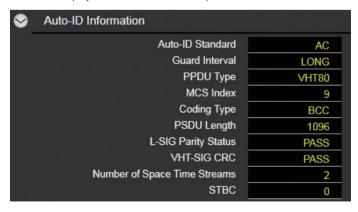


#### **WLAN Measurement Software MX886200A Key Functions**

#### **RF Tx Test**

#### Tx Power Measurement and Power Profile Display

The MT8862A measures the Tx power and displays the average and peak power. The crest factor indicating the difference between the average power and peak power and the power-on ramp time and power-off ramp time indicating the time of ringing and falling are also displayed. The power profile is displayed as a graph of the power vs time for the signal.




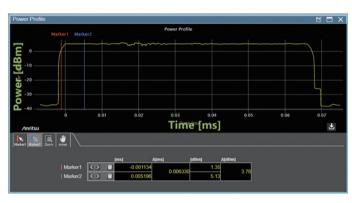



#### Frequency and Modulation Analysis/IQ Constellation Display/Spectrum Display


The MT8862A performs frequency and modulation analyses to measure the Error Vector Magnitude (EVM), which is a good of overall indicator of transmitter quality. When the numerical EVM is bad, the Packet Error Rate (PER) is usually high at WLAN connection. The RMS EVM and Peak EVM for DSSS- and OFDM-modulated carrier waves are expressed as % and dB values, respectively.

In case of OFDM modulation, in addition to EVM, Center Frequency Leakage, Center Frequency Tolerance, Symbol Clock Frequency Tolerance, IQ Imbalance, and Spectral Flatness are also displayed. In case of DSSS modulation, in addition to EVM, Center Frequency Tolerance, IQ Offset, Phase & Magnitude Error, IQ Imbalance, Chip Clock Frequency Tolerance, and Carrier Suppression from IQ Offset are also displayed. Furthermore, the IQ constellation, spectrum flatness, and spectrum analysis results are displayed as graphs.

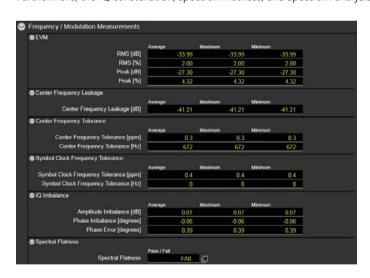

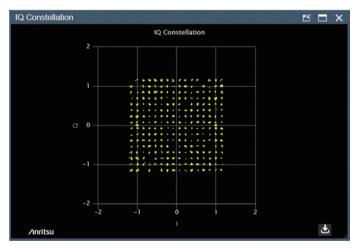

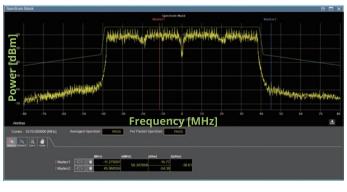

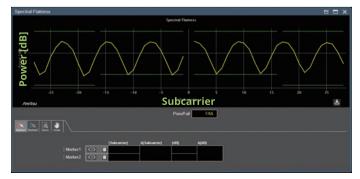

#### **WLAN Measurement Software MX886200A Key Functions**

#### **RF Rx Test**

#### Packet Error Rate (PER)

The MT8862A Network Mode is a unique function that can use general communication method and instead automatically implements the 802.11a/b/g/n/ac/ax device sensitivity search measurement to output the Bathtub curve. By using this function, the device performance can be analyzed at high speed for each data rate, offering a convenient measurement solution for verifying compliance with the 802.11b minimum receiver sensitivity test specifications. This is a flexible test solution because the number of packets sent at each power level can be specified both as the start and stop search level and as step size.



#### Frame Rx rate (FRR)

The Frame Rx Rate can be displayed instead of displaying the Packet Rx Error Rate (PER).



#### **WLAN Measurement Software MX886200A Key Functions**

#### **Connectivity**

	802.11a
Frequency Range	5180 MHz to 5885 MHz*1
Operation Mode	_
Modulation	OFDM (BPSK, QPSK, 16QAM, 64QAM)
Data Rate	6, 9, 12, 18, 24, 36, 48, 54 Mbps
Security*2	WEP, WPA-Personal, WPA2-Personal, WPA3-Personal

	802.11b	802.11g
Frequency Range	2412 MHz to 2484 MHz	
Operation Mode	_	ERP-OFDM
Modulation	DSSS, CCK	OFDM (BPSK, QPSK, 16QAM, 64QAM)
Data Rate	1, 2, 5.5, 11 Mbps	6, 9, 12, 18, 24, 36, 48, 54 Mbps
Security*2	WEP, WPA-Personal, WPA2-Personal, WPA3-Personal	

	802.11n	802.11ac*5
Frequency Range	2412 MHz to 2484 MHz and 5180 MHz to 5885 MHz*1	5180 MHz to 5885 MHz*1
Bandwidth	20 MHz, 40 MHz	20, 40, 80, 160 MHz*6
MCS	MCS0 to MCS7, MCS0 to MCS15*3	MCS0 to MCS9*6
FEC	BCC	BCC
PPDU Format	HT-mixed, HT-greenfield*4 VHT	
Guard Interval Type	Long, Short Long, Short	
RF Chain	Single (SISO), 2×2MIMO* <sup>3</sup> Single (SISO), 2×2MIMO* <sup>3</sup>	
Security*2	WPA-Personal, WPA2-Personal, WPA3-Personal	

	802.11ax* <sup>7</sup>	
Frequency Range	2412 MHz to 2484 MHz, 5180 MHz to 5885 MHz, 5955 MHz to 7115 MHz*1	
Bandwidth	20, 40 MHz (2.4 GHz Band) 20, 40, 80, 160 MHz (5 GHz Band)*8 20, 40, 80, 160 MHz (6 GHz Band)*8	
MCS	MCS0 to MCS11	
FEC	BCC, LDPC	
PPDU Format	Tx measurement: HE SU, HE TB	
Guard Interval Type	Rx measurement: HE SU	
Guard interval and HE-LTF type	HE SU  0.8 µs GI, 1xHE-LTF  0.8 µs GI, 2xHE-LTF  1.6 µs GI, 2xHE-LTF  0.8 µs GI, 4xHE-LTF  3.2 µs GI, 4xHE-LTF  HE TB  1.6 µs GI, 2xHE-LTF  3.2 µs GI, 4xHE-LTF	
RF Chain	Single (SISO)	
Security*2	WPA-Personal, WPA2 -Personal, WPA3-Personal	

<sup>\*1:</sup> The frequencies above 5825 MHz require MT8862A-002 and MT8862A-010.

<sup>\*2:</sup> Secure connections require the MX886200A-020

<sup>\*3:</sup> Available when measure 2×2MIMO receiver sensitivity using MX886200A-010.

<sup>\*4:</sup> Only receiver sensitivity testing is supported in 2×2MIMO.

<sup>\*5: 802.11</sup>ac connection requires MX886200A-001

<sup>\*6:</sup> MCS9 is only available on 40 MHz or 80 MHz bandwidth.

<sup>\*7: 802.11</sup>ax connection requires MX886200A-002

<sup>\*8: 160</sup> MHz bandwidth require MX886200A-030.

#### **WLAN Measurement Software MX886200A Measurement Items**

#### **Tx Measurements**

#### **Items by Standards**

IEEE 802.11-2020: 802.11b

802.11b	Measurement Items		
16.3.7.2	Transmit power levels		
16.3.7.4	Transmit spectral mask		
16.3.7.5	Transmit center frequency tolerance		
16.3.7.6	Chip clock frequency tolerance		
16.3.7.7	Transmit power-on and power-down ramp		
16.3.7.9	Transmit modulation accuracy		

#### IEEE802.11-2020: 802.11a/g/n/ac Tx Measurements\*1

802.11a	802.11g	802.11n	802.11ac	Measurement Items
17.3.9.2	18.4.7.2	19.3.18.3	N/A	Transmit power levels
17.3.9.3	18.4.7.3	19.3.18.1	21.3.17.1	Transmit spectrum mask*2
17.3.9.5	18.4.7.4	19.3.18.4	21.3.17.3	Transmit center frequency tolerance
17.3.9.6	18.4.7.5	19.3.18.6	21.3.17.3	Symbol clock frequency tolerance
17.3.9.7.2	17.3.9.7.2	19.3.18.7.2	21.3.17.4.2	Transmitter center frequency leakage
17.3.9.7.3	17.3.9.7.3	19.3.18.2	21.3.17.2	Transmitter spectral flatness
17.3.9.7.4	17.3.9.7.4	19.3.18.7.3	21.3.17.4.3	Transmitter constellation error
17.3.9.8	17.3.9.8	19.3.18.7.4	21.3.17.4.4	Transmitter modulation accuracy test

#### IEEE 802.11ax-2021: 802.11ax Tx Measurements\*3

802.11ax	Measurement Items	
27.3.15.3	Pre-correction accuracy requirements*4	
27.3.19.1	Transmit spectral mask*5	
27.3.19.2	Spectral flatness	
27.3.19.3	Transmit center frequency and symbol clock frequency tolerance	
27.3.19.4.2	Transmit center frequency leakage	
27.3.19.4.3	Transmitter constellation error	
27.3.19.4.4	Transmitter modulation accuracy (EVM) test	

- \*1: 802.11ac Tx measurement requires MX886200A-001
  \*2: Frequency SPAN of 802.11ac Network Mode supports up to ±80 MHz
  \*3: 802.11ax Tx measurement requires MX886200A-002
  \*4: Measure the error between DUT transmission power and Target RSSI
  \*5: Frequency SPAN of 802.11ax Network Mode supports up to ±80 MHz

#### **Measurement Items**

MT8862A 11b Measurement Items	
Transmit power	
Crest factor	
Power ramp	
EVM (Transmit modulation accuracy)	
Center frequency tolerance	
IQ offset	
Phase error	
Magnitude error	
Amplitude imbalance	
Phase imbalance	
Chip clock frequency tolerance	
Carrier suppression from IQ offset	
Spectrum mask	

MT8862A 11a/g/n/ac Measurement Items
Transmit power
Crest factor
Power ramp
EVM (Transmit modulation accuracy)
Center frequency leakage
Center frequency tolerance
Symbol clock frequency tolerance
Amplitude imbalance
Phase imbalance
Phase error
Spectrum flatness
Spectrum mask

MT8862A 11ax HE SU (Single User) Measurement Items
Transmit power
Crest factor
Power ramp
EVM (Transmit modulation accuracy)
Center frequency leakage
Center frequency tolerance
Symbol clock frequency tolerance
Amplitude imbalance
Phase imbalance
Phase error
Spectrum flatness
Spectrum mask

MT8862A 11ax HE TB (Multi User) Measurement Items
Transmit power
Power pre-correction accuracy
Crest factor
Power ramp
EVM (Transmit modulation accuracy)
Unused tone error
Center frequency leakage
Center frequency tolerance
Center frequency offset
Amplitude imbalance
Phase imbalance
Phase error
Spectrum flatness
Spectrum mask
·

#### **WLAN Measurement Software MX886200A Measurement Items**

#### **Tx Measurements**

#### **Graph Display Items**

MT8862A 11b Graph Display Items	
IQ Constellation	
Power Profile	
Spectrum Mask	

MT8862A 11a/g/n/ac Graph Display Items
IQ Constellation
Power Profile
Spectrum Mask
Spectrum Flatness

MT8862A 11ax Graph Display Items
IQ Constellation
Power Profile
Spectrum Mask
Spectrum Flatness
Carrier Frequency Offset Error (CCDF)□
Unused Tone Error

<sup>\*:</sup> Available on HETB format.

#### **Rx Measurements**

#### IEEE802.11-2020: 802.11b Rx Measurements

802.11b	Measurement Item
16.3.8.2	Receiver minimum input level sensitivity
16.3.8.3	Receiver maximum input level
16.3.8.4	Receiver adjacent channel rejection*1

#### IEEE802.11-2020: 802.11a/g/n/ac Rx Measurements\*2

802.11a	802.11g	802.11n	802.11ac	Measurement Item
17.3.10.2	18.4.8.2	19.3.19.1	21.3.18.1	Receiver minimum input level sensitivity
17.3.10.3	18.4.8.3	19.3.19.2	21.3.18.2	Adjacent channel rejection*1
17.3.10.4	17.3.10.4	19.3.19.3	21.3.18.3	Nonadjacent channel rejection*1
17.3.10.5	18.4.8.4	19.3.19.4	21.3.18.4	Receiver maximum input level

#### IEEE 802.11ax-2021: 802.11ax Rx Measurements\*3

802.11ax	Measurement Item
27.3.20.2	Receiver minimum input sensitivity
27.3.20.3	Adjacent channel rejection*1
27.3.20.4	Nonadjacent channel rejection*1
27.3.20.5	Receiver maximum input level

#### Graph Display

Measurement Item
Packet Error Rate (PER)
Frame Reception Rate (FRR)

<sup>\*1:</sup> Sold separately; requires signal generator

<sup>\*2: 802.11</sup>ac Rx measurement requires MX886200A-001

<sup>\*3: 802.11</sup>ax Rx measurement requires MX886200A-002

#### **Wireless Connectivity Test Set MT8862A Configuration**

#### System Configurations/Options/Software/PC Controller Operation Environment

System	Wireless LAN	
Main Frame	Wireless Connectivity Test Set MT8862A	
Basic Configuration (Hardware)	RF Frequency 2.4 GHz, 5 GHz MT8862A-001	
Basic Configuration (Software)	WLAN Measurement Software MX886200A	
Option (Hardware)	RF Frequency 6 GHz MT8862A-002 Extended RF Hardware MT8862A-010	
Options (Software)	WLAN 802.11ac Option MX886200A-001 WLAN 802.11ax Option MX886200A-002 2×2MIMO Measurement Software MX886200A-010 WLAN Security Function MX886200A-020 160 MHz Bandwidth MX886200A-030	

#### **Verified PC Operation Environment**

PC	Software OS: Windows 10 Browser: Chrome CPU: Intel Core i5 processor Clock: 2.5 GHz Memory: 1 GB minimum Hard Disk: 500 MB minimum free space LAN: 100 Base-T LAN (1000-base T preferred)	
Peripherals	Display: WXGA 1024 × 768 minimum	

### **Options Configuration Guide**

#### Hardware

√ = Can be installed, R = Require

Option	Name	Retrofit	Combination with "Option" (Refer to the left line)		
				002	010
001	RF Frequency 2.4 GHz, 5 GHz	No		✓	✓
002	RF Frequency 6 GHz		R		R
010	Extended RF Hardware		R	R	

#### Software

	Nove	Hardware configuratio ✓ = Can be installed, N		
Model	Name ·	001 (2.4 GHz, 5 GHz)	001, 002, 010 (2.4 GHz, 5 GHz, 6 GHz)	Note
MX886200A	WLAN Measurement Software	✓	✓	Support 802.11b/g/a/n.
MX886200A-001	WLAN 802.11ac Option	✓	✓	
MX886200A-002	WLAN 802.11ax Option	✓	✓	
MX886200A-010	2×2MIMO Measurement Software	✓	✓	Support 802.11n/ac.
MX886200A-020	WLAN Security Function	✓	✓	
MX886200A-030	160 MHz Bandwidth	No	✓	

#### Wireless Connectivity Test Set MT8862A Panel Layout

#### **Front Panel**



#### Power switch

Turns the power On or Off.
Off: Power is Off, Green: Power is On.

#### Standby lamp

The power is supplied to the AC inlet and the power switch can be turned On.

#### Access lamp

Green: Accessing the built-in storage device.

#### **4** IP Address Reset key

Long-pressing this switch resets the network settings such as IP address to defaults.

#### **5** External Ref. lamp

Indicates status of external reference signal.

#### **6** System Error lamp

Indicates errors of the unit.

#### Local key

Reset the remote control state by Ethernet to local and enable panel setting.

#### 8 Remote lamp

Off: Local control.

Green: Remote control.

#### Preset key

Long-pressing this switch resets the parameter settings to defaults.

#### Ready lamp/Connect lamp/ Measure lamp

Ready lamp: Indicates the MT8862A startup state.
Connect lamp: Indicates the connection state between
MT8862A and DUT.

Measure lamp: Indicates the MT8862A measurement state.

#### 1 Input Signal Level lamp

Indicates the input signal level.

#### PRF Output On/Off lamp

Indicates setting state of RF output.

## (3) Main In/Out 1, 2 connector/Aux Out connector/ Output lamp/Input lamp

Main In/Out 1, 2 connector: Inputs or outputs RF signal. Aux Out connector: Outputs RF signal.

Output lamp: Indicates the connector's setting state. Input lamp: Indicates the connector's setting state.

#### **Wireless Connectivity Test Set MT8862A Panel Layout**

#### **Rear Panel**



- **(1) AC inlet** AC power inlet for the power cable.
- **Ethernet (Remote) connector**Connect a personal computer (PC) or Ethernet network for remote control.
- **USB connector (A type)**Connector for feature expansion.
  Currently not supported.
- **Expansion I/O connector**Connector for synchronization of MT8862A Primary/Secondary for MIMO Measurement.
- Trigger Input Inputs external trigger signals (TTL). (BNC connector)

- Trigger Output
  Outputs trigger signals (TTL).
  (BNC connector)
- Ethernet (IP Data) connector Connects a PC or Ethernet network for IP Data input/output.
- Reference Input connector Inputs an external reference frequency signal (10 MHz). (BNC connector)
- Buffer Output connector Outputs the reference frequency signal (10 MHz). (BNC connector)

	Frequency
	Range
	MT8862A-001 installed: 2.4 GHz to 2.5 GHz, 5.0 GHz to 6.0 GHz
	MT8862A-002, 010 installed: 6.0 GHz to 7.3 GHz
	Setting Resolution: 1 Hz
	Accuracy: Depends on reference oscillator accuracy
	Level
	Setting Range: –65 to +25 dBm Setting Resolution: 0.1 dB
	Accuracy
	Measurement Conditions: CW, Measurement Bandwidth: 300 kHz, 20°C to 30°C, Input signal lower than setting level and excluded
	influence of linearity error, after calibration
	2.4 GHz ≤ Frequency ≤ 2.5 GHz
	±0.7 dB (-30 dBm ≤ Setting Level ≤ +25 dBm)
	±0.9 dB (-55 dBm ≤ Setting Level < -30 dBm)
	±1.1 dB (-65 dBm ≤ Setting Level < -55 dBm)
	5.0 GHz ≤ Frequency ≤ 6.0 GHz
	±0.7 dB (–30 dBm ≤ Setting Level ≤ +25 dBm)
	±0.9 dB (–55 dBm ≤ Setting Level < –30 dBm)
	±1.1 dB (–65 dBm ≤ Setting Level < –55 dBm)
Receiver	6.0 GHz < Frequency ≤ 7.3 GHz
	±0.7 dB (−30 dBm ≤ Setting Level ≤ +25 dBm)
	±0.9 dB (-55 dBm ≤ Setting Level < -30 dBm)
	±1.1 dB (-65 dBm ≤ Setting Level < -55 dBm)
	Measurement Conditions: CW, Measurement Bandwidth: 160 MHz, 20°C to 30°C, Input signal lower than setting level and excluded
	influence of linearity error, after calibration
	2.4 GHz ≤ Frequency ≤ 2.5 GHz
	±0.7 dB (-30 dBm ≤ Setting Level ≤ +25 dBm) ±1.0 dB (-50 dBm ≤ Setting Level < -30 dBm)
	5.0 GHz ≤ Frequency ≤ 6.0 GHz
	±0.7 dB (-30 dBm ≤ Setting Level ≤ +25 dBm)
	±1.0 dB (-50 dBm ≤ Setting Level < -30 dBm)
	6.0 GHz < Frequency ≤ 7.3 GHz
	±0.7 dB (–30 dBm ≤ Setting Level ≤ +25 dBm)
	±1.0 dB (-50 dBm ≤ Setting Level < -30 dBm)
	Linearity
	Measurement Conditions: CW, Measurement Bandwidth: 300 kHz, 0 to –40 dB of setting level
	±0.2 dB (-55 dBm ≤ Input Level)
	±0.4 dB (–65 dBm ≤ Input Level < –55 dBm)
	Measurement Conditions: CW, Measurement Bandwidth: 160 MHz, 0 to –40 dB of setting level
	±0.4 dB (–40 dBm ≤ Input Level)
	Frequency
	Output Frequency Range
	MT8862A-001 installed: 2.4 GHz to 2.5 GHz, 5.0 GHz to 6.0 GHz
	MT8862A-002, 010 installed: 6.0 GHz to 7.3 GHz
	Setting Resolution: 1 Hz
	Accuracy: Depends on reference oscillator accuracy
	Level Setting Range: –120 to 0 dBm
Transmitter	Setting Resolution: 0.1 dB
Transmitter	Accuracy
	Output Setting: CW
	20°C to 30°C, Output Level: ≥–110 dBm, after Calibration
	$\pm 1.0$ dB, $\pm 0.7$ dB (typ.) (2.4 GHz $\leq$ Frequency $\leq$ 2.5 GHz)
	$\pm 1.3$ dB, $\pm 1.0$ dB (typ.) (5.0 GHz ≤ Frequency ≤ 6.0 GHz)
	$\pm 1.3$ dB, $\pm 1.0$ dB (typ.) (6.0 GHz < Frequency ≤ 7.3 GHz)
	Signal Purity
	Harmonic: ≤–25 dBc
	At Start: $\pm 5 \times 10^{-7}$ (2 minutes after power-on, at 25°C referenced to frequency at 24 hour after power-on)
	$\pm 5 \times 10^{-8}$ (5 minutes after power-on, at 25°C referenced to frequency at 24 hour after power-on)
Reference Oscillator	Aging Rate: $\pm 1 \times 10^{-7}$ /year
	Temperature Characteristics: ±2 × 10 <sup>-8</sup> (5°C to 45°C)
	Shipped Frequency Accuracy: $\pm 2.2 \times 10^{-8}$ (1 hour after power-on at 20°C to 30°C)

## **Wireless Connectivity Test Set MT8862A Specifications**

Front Panel Connectors	RF Input/Output  Main1, 2  Connector: N-J, $50\Omega$ (nominal)  VSWR: $\leq 1.5$ ( $2.4$ GHz $\leq$ Frequency $\leq$ $2.5$ GHz) $\leq 1.7$ ( $5.0$ GHz $\leq$ Frequency $\leq$ $6.0$ GHz) $\leq 1.7$ ( $6.0$ GHz $<$ Frequency $\leq$ $7.3$ GHz)  Aux Out  Connector: N-J, $50\Omega$ (nominal)  VSWR: $\leq 1.5$ ( $2.4$ GHz $\leq$ Frequency $\leq$ $2.5$ GHz) $\leq 1.6$ ( $5.0$ GHz $\leq$ Frequency $\leq$ $6.0$ GHz) $\leq 1.6$ ( $6.0$ GHz $\leq$ Frequency $\leq$ $7.3$ GHz)
Back Panel Connectors	Reference Signal  External Reference Input  Connector: BNC-J  Frequency: 10 MHz, Impedance: 50Ω  Operation range: ±1 ppm, Input Level: −15 dBm ≤ Level ≤+20 dBm, 50Ω (AC coupled)  Reference Signal Output  Connector: BNC-J  Frequency: 10 MHz, Impedance: 50Ω  Output Level: ≥0 dBm (AC coupled))  External Trigger  Trigger Input 1/2  Connector: BNC 1/2, Input Level: TTL  Trigger Output 1/2  Connector: BNC 1/2, Output Level: TTL  External Interfaces  Ethernet (Remote): Required for remote control from external controller  Connector: USB-A, 2 Ports  Expansion I/O: Connector for function expansion  Connector: 50 pin (DX10A-50S)  Ethernet (IP Data): IP Data Transfer  Connector: RJ-45, Speed: 1000BASE-T
Dimensions and Mass	426 (W) × 177 (H) × 390 (D) mm (excluding projections), ≤14 kg
Power Supply	Rated voltage: 100 V(ac) to 120 V(ac) or 200 V(ac) to 240 V(ac) Rated frequency: 50 Hz/60 Hz Power consumption: ≤350 VA
Operating Conditions	Temperature Operating: +5°C to +45°C, Storage: -20°C to +60°C
CE	EMC: 2014/30/EU, EN61326-1, EN61000-3-2 LVD: 2014/35/EU, EN61010-1 RoHS: 2011/65/EU, EN50581

### **WLAN Measurement Software MX886200A Specifications**

	2.4 GHz Band: 2412 MHz to 2484 MHz (with MT8862A-001 installed)
Frequency Range	5 GHz Band: 5180 MHz to 5825 MHz (with MT8862A-001 installed)
	5180 MHz to 5885 MHz (with MT8862A-001, 002, 010 installed)
	6 GHz Band:5955 MHz to 7115 MHz (with MT8862A-001, 002, 010 installed)
Amplitude Measurement	Input Level Range: –50 to +25 dBm
	Input Level Accuracy: After calibration at 20°C to 30°C
	±0.7 dB (-30 dBm ≤ Input Level ≤+25 dBm)
	±1.0 dB (–50 dBm ≤ Input Level <–30 dBm)
	Linearity: ±0.4 dB (–40 dBm ≤ Input Level, 0 to –30 dB range compared to setting level)
	Bandwidth: 40 MHz/20 MHz (802.11n), 20 MHz (802.11a/b/g), 160/80/40/20 MHz (802.11ac, with MX886200A-001 installed),
	160/80/40/20 MHz (802.11ax, with MX886200A-002, 030 installed)
Spectrum Measurement	Input Level Range: –10 to +25 dBm
	EVM Measurement Range: –20 to +25 dBm
	Residual EVM
	DSSS: <−28 dB (−20 dBm ≤ Input Level, Average of 20 Packets)
	OFDM (802.11a/g/n): <-40 dB (-20 dBm ≤ Input Level, Average of 20 Packets, Channel Estimate: Full Packets)
	OFDM (802.11ac, with MX886200A-001 installed): <−38 dB (−10 dBm ≤ Input Level, Average of 20 Packets, Channel Estimate: Full Packets)
EVM	OFDM (802.11ac, 160 MHz bandwidth, with MX886200A-001, 030 installed):
	<-44 dB (nom.) (-10 dBm ≤ Input Level, Average of 20 Packets, Channel Estimate: Full Packets, MCS9)
(Modulation Accuracy)	OFDM (802.11ax, with MX886200A-002 installed):
	<–42 dB (nom.) (–10 dBm ≤ Input Level, Average of 20 Packets, Channel Estimate: Full Packets)
	OFDM (802.11ax, with MX886200A-002, 030 installed):
	<-44 dB (nom.) (-10 dBm ≤ Input level, Average of 20 Packets, Channel Estimate: Full packet, MCS11)
	EVM Data Format: % or dB
	Measurement Resolution: 0.01% or 0.01 dB
Carrier Frequency	Measurement Level Range: –20 to +25 dBm
	Carrier Frequency Accuracy
	802.11b: ± (Setting Frequency × Reference Oscillator Accuracy + 1 kHz) (Average of 20 Packets)
Measurement	802.11a/g/n/ac: ± (Setting Frequency × Reference Oscillator Accuracy + 1 kHz) (Average of 20 Packets, Channel Estimate: Full Packets)
	802.11ax: ± (Setting Frequency × Reference Oscillator Accuracy + 5 Hz) (nom.) (more than 100 symbol and 242 tones, and Channel
	Estimate:Full Packets, Frequency error range: Full packet)
	Level Setting Range: –120 to 0 dBm (Aux Out Connector)
	–120 to 0 dBm (Main 1/2 Connector, Frequency ≤ 6 GHz and Channel Band 2.4 GHz/5 GHz)
	−120 to −5 dBm (Main 1/2 Connector, Frequency > 6 GHz or Channel Band 6 GHz)
	EVM: Packet Length 1472 byte
	802.11b: ≤–38 dB rms (2412 MHz to 2484 MHz, Long Preamble, Gaussian Filter BT0.5, 5°C to 45°C)
	802.11g (OFDM): ≤–40 dB rms(2412 MHz to 2484 MHz, 20°C to 30°C)
RF Signal Generator	802.11a: ≤–38 dB rms (5180 MHz to 5885 MHz, 20°C to 30°C)
	802.11n: ≤–40 dB rms (2412 MHz to 2484 MHz, Long GI, HT-mixed format, Channel Bandwidth 40 MHz, 20°C to 30°C)
	≤−38 dB rms (5180 MHz to 5885 MHz, Long GI, HT-mixed format, Channel Bandwidth 40 MHz, 20°C to 30°C)
	802.11ac: ≤-37 dB rms (5180 MHz to 5885 MHz, Long GI, Channel Bandwidth 80 MHz, 20°C to 30°C)
	≤-41 dB rms (5180 MHz to 5885 MHz, Long GI, MCS9, Channel Bandwidth 160 MHz, 20°C to 30°C)
	802.11ax: ≤-40 dB rms (nom.) (5180 MHz to 5885 MHz, 0.8 µs GI, Channel Bandwidth 80 MHz, 20°C to 30°C)
	≤-41 dB rms (nom.) (5180 MHz to 5885 MHz, 0.8 µs GI, MCS11, Channel Bandwidth 160 MHz, 20°C to 30°C)
	≤–41 dB rms (nom.) (5995 MHz to 7115 MHz, 0.8 μs GI, MCS11, Channel Bandwidth 160 MHz, 20°C to 30°C)
Functions	Network Functions
	Connection: Network Connection using Messages defined by IEEE802.11
	Role: Access Point (AP/STA)
	Frame Capture: 1, 2, 4, 8, 16, 32, 64, 128, 256 MB
	Tx Test  Measurement Type: Data, ACK
	Rx Test
	Measurement Type: Packet Error Rate (PER), Frame Reception Rate (FRR) Payload Type: All 0's, 0101, 1010, PN7, PN9, Random, Counting
	MIMO signal transmission (with MX886200A-010) – MIMO signals available for receiver testing.
	Spatial stream N <sub>ss</sub> : 1 to 2
	Space-time-stream N <sub>STS</sub> : 1 to 2
	RF chain $N_{TX}$ : 2
	STBC: Supported only with N <sub>SS</sub> =1 and N <sub>STS</sub> =2
	Spatial mapping: Direct mapping
	Beamforming: Not supported
	Security encryption (with MX886200A-020 installed)
	WEP, WPA-Personal, WPA2-Personal

Typical (typ.): Performance not warranted. Most products meet typical performance. Nominal (nom.): Values not warranted. Included to facilitate application of product.

#### **Wireless Connectivity Test Set MT8862A Ordering Information**

Please specify the model/order number, name and quantity when ordering.

The names listed in the chart below are Order Names. The actual name of the item may differ from the Order Name.

Model/Order No.	Name
	Main Frame
MT8862A	Wireless Connectivity Test Set
	Standard Accessories
J0017F	Power Code: 1
	DVD (Operation Manual): 1
W3901AE	MT8862A Operation Manual (Operation) [DVD]
W3902AE	MT8862A Operation Manual (Remote Control) [DVD]
W3903AE	MX886200A WLAN Measurement Software Manual
	(Operation) [DVD]
W3904AE	MX886200A WLAN Measurement Software Manual
	(Remote Control) [DVD]
	RF Options
MT8862A-001	RF Frequency 2.4 GHz, 5 GHz
MT8862A-002	RF Frequency 6 GHz
MT8862A-010	Extended RF Hardware
	Retrofit RF Options*1
MT8862A-102	RF Frequency 6 GHz Retrofit
MT8862A-202	RF Frequency 6 GHz Retrofit
MT8862A-110	Extended RF Hardware Retrofit
MT8862A-210	Extended RF Hardware Retrofit
MT8862A-310	Extended RF Hardware Retrofit
	Software Options
MX886200A	·
MX886200A-001	WLAN Measurement Software (Requires MT8862A-001) WLAN 802.11ac Option
MX886200A-001	WLAN 802.11ac Option
MX886200A-002	2×2MIMO Measurement Software
MX886200A-010	WLAN Security Function
MX886200A-030	160 MHz Bandwidth
MX886200A-070	Remote Control Expansion
	Options
MT8862A-ES210	2 Years Extended Warranty Service
MT8862A-ES310	3 Years Extended Warranty Service
MT8862A-ES510	5 Years Extended Warranty Service
	,
101274	Application Parts Coaxial Cord, 1 m (BNC-P, RG-58A/U, BNC-P)
J0127A J0127B	Coaxial Cord, 7 m (BNC-P, RG-58A/U, BNC-P)
J0127Б J0127С	Coaxial Cord, 0.5 m (BNC-P, RG-58A/U, BNC-P)
J0576B	Coaxial Cord, 1 m (N-P, 5D-2W, N-P)
J0576D	Coaxial Cord, 2 m (N-P, 5D-2W, N-P)
J0322A	Coaxial Cord, 0.5 m (SMA-P, SMA-P)
J0322B	Coaxial Cord, 1.0 m (SMA-P, SMA-P)
J0322C	Coaxial Cord, 1.5 m (SMA-P, SMA-P)
J0322D	Coaxial Cord, 2.0 m (SMA-P, SMA-P)
J0004	Coaxial Adapter (N-P, SMA-J)
J1261A	Ethernet Cable (Straight, 1 m)
J1261B	Ethernet Cable (Straight, 3 m)
J1261C	Ethernet Cable (Cross, 1 m)
J1261D	Ethernet Cable (Cross, 3 m)
J1777A	Expansion IO Cable
B0635A	Rack Mount Kit (EIA)
B0657A	Rack Mount Kit (JIS)
B0636C*2	Carrying Case (Hard type, with a front cover and casters)
B0671A	Front Cover (1MW4U)

<sup>\*1:</sup> MT8862A- □ ##

- □: Select from the following according to the option type.
- 1: Retrofit option (Must be returned to factory in Japan)
- 2: Retrofit option (Must be returned to service center outside of Japan)
- 3: Retrofit option (No need to return)

<sup>\*2:</sup> The Carrying Case B0636C includes a Front Panel Protective Cover (B0671A).



Specifications are subject to change without notice.

#### United States

#### **Anritsu Americas Sales Company**

450 Century Parkway, Suite 190, Allen, TX 75013 U.S.A. Phone: +1-800-Anritsu (1-800-267-4878)

#### Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120, Kanata, Ontario K2V 1C3, Canada Phone: +1-613-591-2003 Fax: +1-613-591-1006

#### Anritsu Eletronica Ltda.

Praça Amadeu Amaral, 27 - 1 Andar 01327-010 - Bela Vista - Sao Paulo - SP, Brazil Phone: +55-11-3283-2511 Fax: +55-11-3288-6940

#### Anritsu Company, S.A. de C.V.

Blvd Miguel de Cervantes Saavedra #169 Piso 1, Col. Granada Mexico, Ciudad de Mexico, 11520, MEXICO

#### Phone: +52-55-4169-7104

#### • United Kingdom Anritsu EMEA Ltd.

200 Capability Green, Luton, Bedfordshire, LU1 3LU, U.K. Phone: +44-1582-433200 Fax: +44-1582-731303

#### • France

#### Anritsu S.A.

12 avenue du Québec, Immeuble Goyave, 91140 VILLEBON SUR YVETTE, France Phone: +33-1-60-92-15-50

#### Germany

#### Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1, 81829 München, Germany Phone: +49-89-442308-0 Fax: +49-89-442308-55

#### • Italy

#### Anritsu S.r.l.

Spaces Eur Arte, Viale dell'Arte 25, 00144 Roma, Italy Phone: +39-6-509-9711

#### Sweden

#### Anritsu AB

Kistagången 20 B, 2 tr, 164 40 Kista, Sweden Phone: +46-8-534-707-00

#### Anritsu AR

Technopolis Aviapolis, Teknobulevardi 3-5 (D208.5.), FI-01530 Vantaa, Finland Phone: +358-20-741-8100

#### Denmark

#### Anritsu A/S

c/o Regus Winghouse, Ørestads Boulevard 73, 4th floor, 2300 Copenhagen S, Denmark

#### Phone: +45-7211-2200

#### • Russia

#### Anritsu EMEA Ltd. **Representation Office in Russia**

Tverskaya str. 16/2, bld. 1, 7th floor., Moscow, 125009, Russia Phone: +7-495-363-1694 Fax: +7-495-935-8962

#### Spain

#### Anritsu EMEA Ltd.

#### Representation Office in Spain

Paseo de la Castellana, 141. Planta 5, Edificio Cuzco IV 28046. Madrid. Spain Phone: +34-91-572-6761

#### • Austria

#### Anritsu EMEA GmbH

Am Belvedere 10, A-1100 Vienna, Austria Phone: +43-(0)1-717-28-710

#### United Arab Emirates Anritsu EMEA Ltd.

#### Anritsu A/S

Office No. 164, Building 17, Dubai Internet City P. O. Box - 501901, Dubai, United Arab Emirates Phone: +971-4-3758479

#### • India

#### **Anritsu India Private Limited**

6th Floor, Indiqube ETA, No.38/4, Adjacent to EMC2, Doddanekundi, Outer Ring Road, Bengaluru – 560048, India Phone: +91-80-6728-1300 Fax: +91-80-6728-1301

#### Singapore

#### Anritsu Pte. Ltd.

11 Chang Charn Road, #04-01, Shriro House, Singapore 159640 Phone: +65-6282-2400

#### Vietnam

#### **Anritsu Company Limited**

16th Floor, Peakview Tower, 36 Hoang Cau Street, O Cho Dua Ward, Dong Da District, Hanoi, Vietnam Phone: +84-24-3201-2730

#### • P.R. China (Shanghai) Anritsu (China) Co., Ltd.

Room 2701-2705, Tower A, New Caohejing International Business Center No. 391 Gui Ping Road Shanghai, 200233, P.R. China Phone: +86-21-6237-0898 Fax: +86-21-6237-0899

#### • P.R. China (Hong Kong) Anritsu Company Ltd.

Unit 1006-7, 10/F., Greenfield Tower, Concordia Plaza, No. 1 Science Museum Road, Tsim Sha Tsui East, Kowloon, Hong Kong, P.R. China Phone: +852-2301-4980 Fax: +852-2301-3545

#### Japan

#### Anritsu Corporation

8-5, Tamura-cho, Atsugi-shi, Kanagawa, 243-0016 Japan Phone: +81-46-296-6509 Fax: +81-46-225-8352

#### Korea

#### Anritsu Corporation, Ltd.

5FL, 235 Pangyoyeok-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13494 Korea Phone: +82-31-696-7750 Fax: +82-31-696-7751

#### Australia

#### Anritsu Pty. Ltd.

Unit 20, 21-35 Ricketts Road, Mount Waverley, Victoria 3149, Australia Phone: +61-3-9558-8177 Fax: +61-3-9558-8255

#### Taiwan

#### **Anritsu Company Inc.**

7F, No. 316, Sec. 1, NeiHu Rd., Taipei 114, Taiwan Phone: +886-2-8751-1816 Fax: +886-2-8751-1817

2106